 

 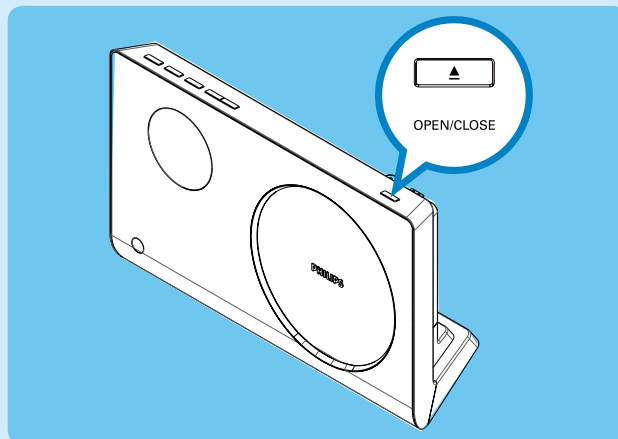
 




# 3 Enjoy


## Start disc play

- 1 Press  to open the disc compartment.




  - 2 Place a disc with the disc label facing out.
- 3 Press  to close the disc compartment and start disc play.
- If the disc menu is displayed on the TV, use cursor buttons to select an option in the menu, then press **OK**.
- To enjoy powerful surround sound, press **SURROUND** to turn on the multi-channel surround mode.
- 4 Press  to stop play.


 
 
**Note** When you press , playback resumes from where it was last stopped. To start playback from the beginning, press  while the message is displayed.

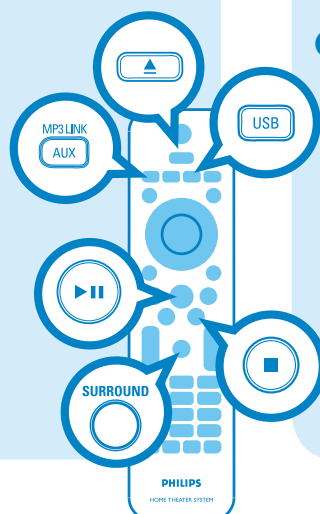

## Play other supported devices

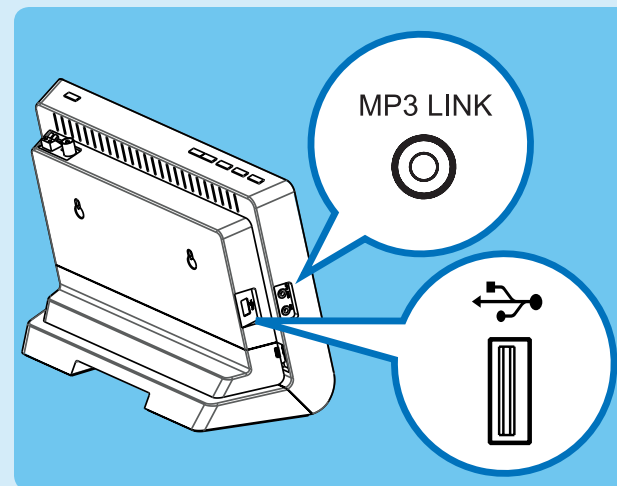

### USB device

- 1 Insert your USB device to  (USB) socket.
- 2 Press **USB** to switch to 'USB' mode.
- 3 Select a file to play, then press .
- 4 To stop play, press  or remove the USB device.

### Other portable media player

- 1 Connect a 3.5mm stereo audio cable (supplied) from the MP3 LINK socket to the headphone output socket on your portable media player.
- 2 Press **AUX/MP3 LINK** repeatedly until 'MP3 LINK' is displayed.
- 3 Press **PLAY** on your portable media player.

## Need help?

### User Manual

See the user manual that came with your Philips DVD Home Theatre System.

Be responsible  
Respect copyrights



2008 © Koninklijke Philips N.V.  
All rights reserved.  
www.philips.com  
sgpip-816/12-eng I

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)


HTS4600



- 1 Connect
- 2 Set up
- 3 Enjoy

# Quick Start Guide

## What's in the box?

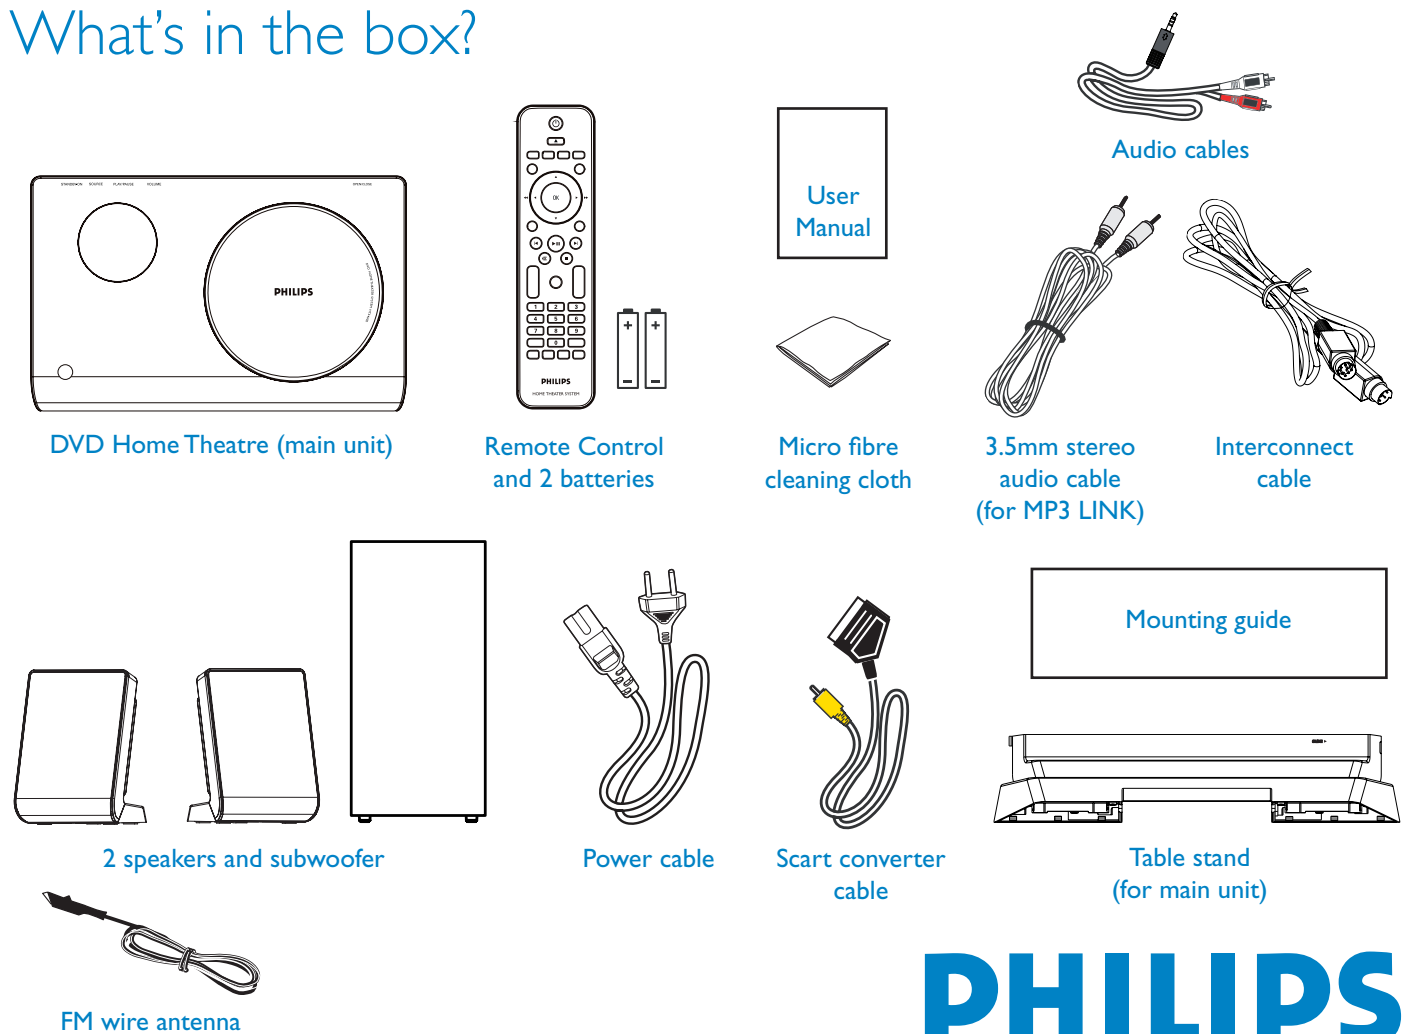


**PHILIPS**

# 1 Connect


## A Placement

Proper speakers system placement is important to ensure optimum sound performance.

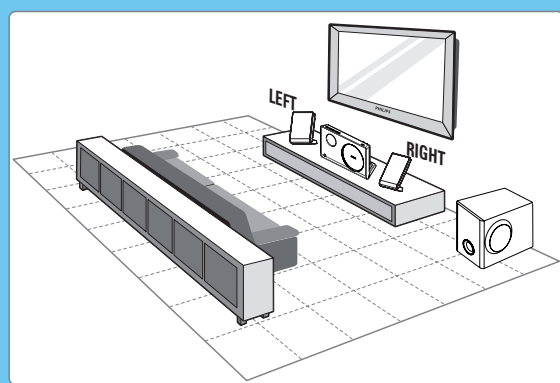

- 1 Place the speakers at the normal listening ear level, equal distance from the TV and face it straight ahead towards the listening area.
- 2 Place the subwoofer on the floor, at least one metre away from the TV.

## B Connect to TV

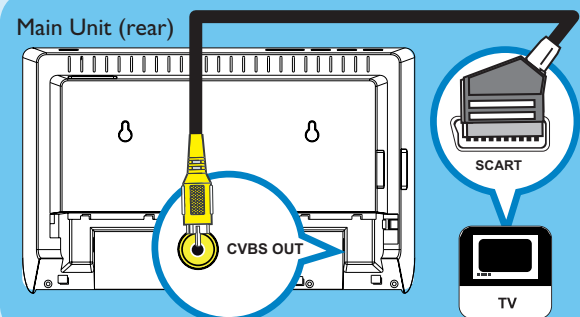


- Connect the scart converter cable from the CVBS OUT socket to the SCART socket on your TV.

**Note** If your TV supports HDMI, connect this unit to your TV using HDMI connection for better picture quality. See the accompanying user manual for more information.


## C Connect audio output from TV (for EasyLink control)

To hear the TV audio through this DVD Home Theatre unit, connect an audio cable (supplied) from the AUX IN sockets to the AUDIO OUT sockets on your TV.

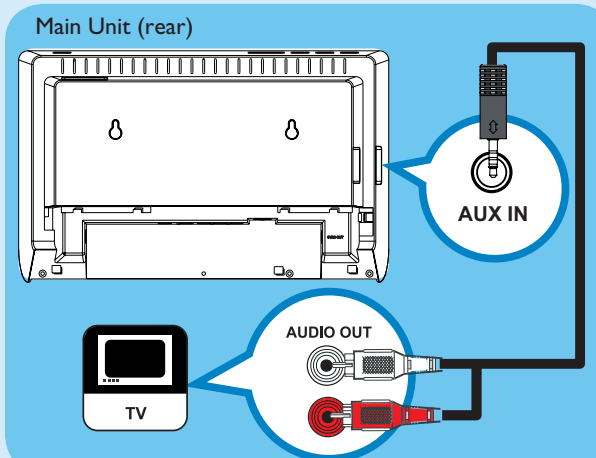


**Note** To listen to the audio output from this connection, press **AUX/ MP3 LINK** repeatedly until 'AUX' is displayed on the display panel.

## D Connect speakers

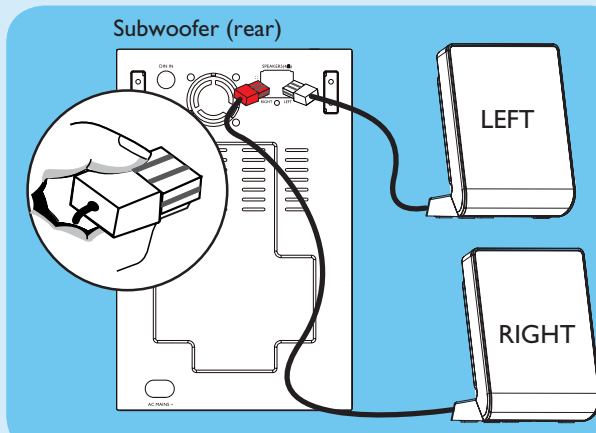


- 1 Connect the left and right speakers to the matching sockets on the subwoofer.

## E Connect subwoofer and power cable

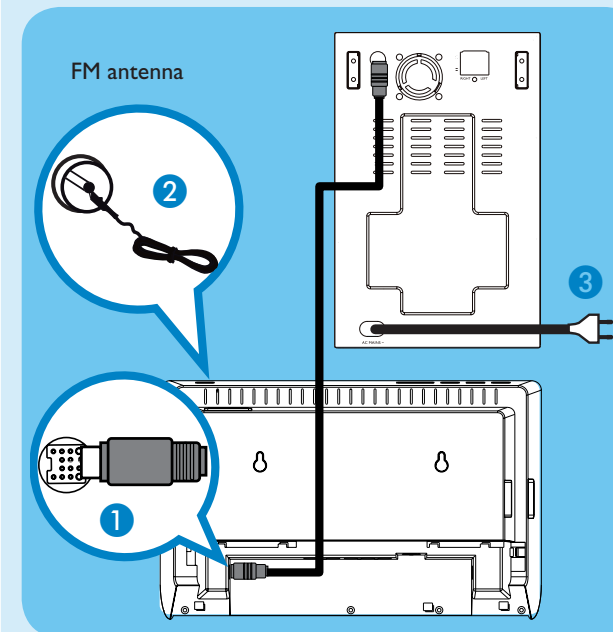

- 1 Connect the interconnect cable between TO MAIN UNIT socket on the subwoofer and TO SUBWOOFER socket on this DVD Home Theatre unit.
- 2 Connect the FM antenna to the inner pin of the FM 75 Ω socket (for some models, it has been connected in the factory). Extend the wire for optimum reception.
- 3 Connect the power cable from subwoofer to the AC power outlet.

## F Attach table stand to DVD Home Theatre unit

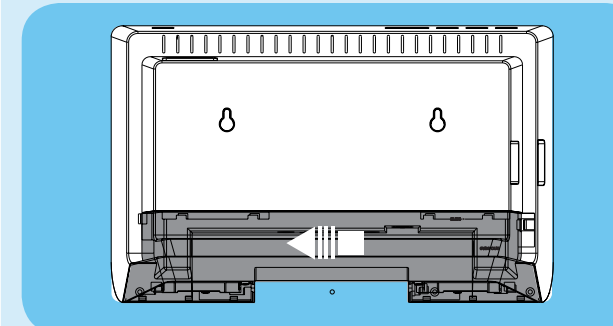

- 1 Attach the table stand to the rear of this unit and slide it to the left to lock into position.

# 2 Set up


## A Find the viewing channel

- 1 Press **⏻** to turn on this DVD Home Theatre unit.
- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

**Note** To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, **⏻** button) until you see the Video In channel.

## B Select on-screen display language

- 1 Press **OPTIONS**. [ General Setup ] menu is displayed.
- 2 Press **▶**.

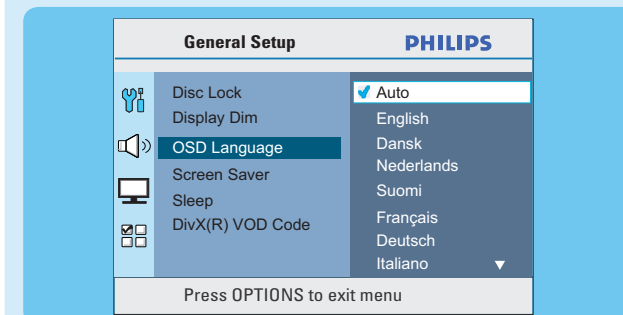

- 3 Press **▼** to select [ OSD Language ], then press **▶**.
- 4 Press **▲▼** to select a language option, then press **OK**.
- 5 Press **OPTIONS** to exit.

**Note** The language set here is only for the menus that are shown on the TV while operating this DVD Home Theatre unit, not for the DVD disc menu.

There are various setup options (Audio Setup, Video Setup, Preferences) available on this DVD Home Theatre unit. Refer to the user manual for more information.

